

Tip: An Oil Free Unit Is Not Producing Air

Check the supply tube (transfer tube) and check valve for material. These parts can get clogged with gasket and/or piston ring material, therefore the tank will not pressurize (or it may pressurize very slowly).

Keep this tip in mind when trying to troubleshoot an air compressor.